


# Easystart Timer – Workshop Menu

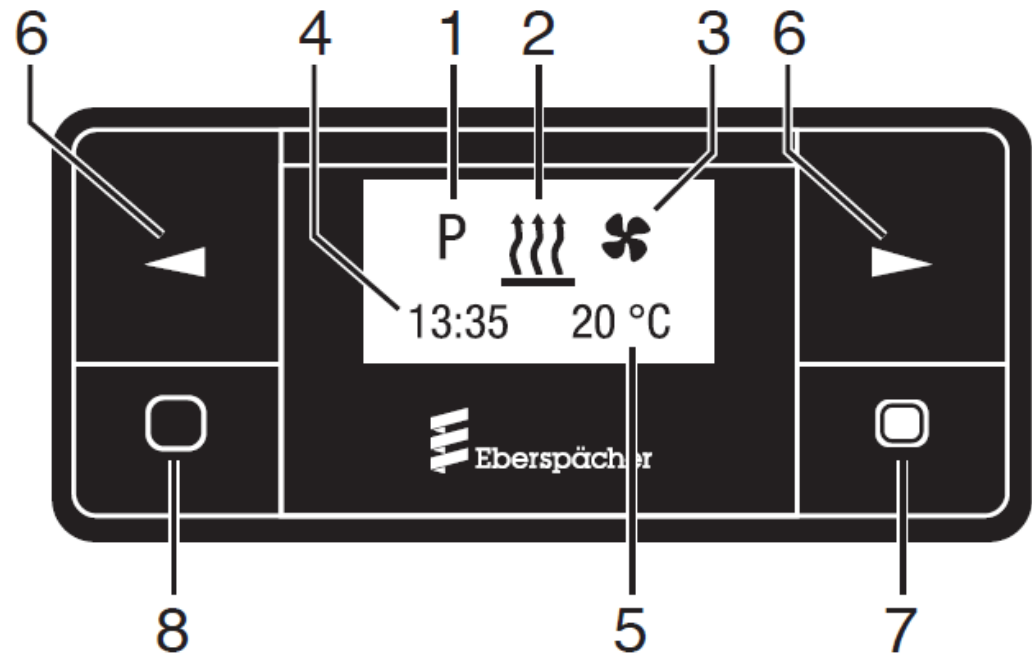

- Familiarization
- Workshop Menu
- Fault Codes
- Settings

- 1 Program symbol
- 2 Heat symbol
- 3 Fan symbol
- 4 Current time
- 5 Temperature (Optional)
- 6 Menu selection button
- 7 Enter / “ON”
- 8 Exit / “OFF”



## Notes – #7 and #8

- “short press” (less than 2 seconds) : #7 enter (yes/confirm); #8 Exit
- “long press” (more than 2 seconds) : #7 on; #8 off
- This is important for menu navigation and settings



## FLASHING SYMBOL / FLASHING VALUE

In the Main menu a flashing symbol in the Menu bar is activated with the  button.

In the submenu a flashing value can be confirmed or a selection made using the  or  button.

## Main Menu

1. Use the selection buttons (arrows) to highlight (flashing) menu choice.
2. Confirm choice with the “enter” button (#7).

## Sub Menu

1. Use the selection buttons (arrows) to change the flashing value.
2. Confirm choice with the “enter” button (#7).

**Note:**

Changes to control parameters remain unless the defaults are activated. (Menu 5)




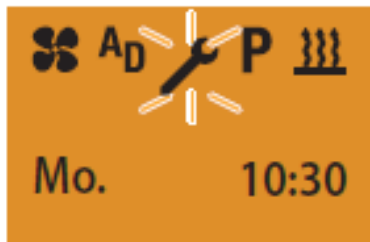
## PLEASE NOTE!


- A reset (remove 5A fuse) is necessary to activate some functions. To do this, not and follow the relevant note under “Comments” of the “Service functions overview”.
- To correct the fault, refer to the heater's repair instructions.

# Easystart Timer Workshop Menu


## Display On

Use the ◀ or ▶ button to select the  symbol in the Menu bar.



Confirm the SETTINGS menu item by pressing the  button.



Press the  LONGPRESS button for longer than 5 sec.; the Workshop menu is displayed.



### Note:

You are long pressing button #8

# Easystart Timer Workshop Menu

## Scroll through Menu Items




### SELECTING THE TEMPERATURE UNITS – ITEM 2:

Default: °C



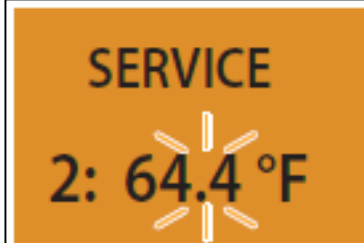

Use the ◀ or ▶ button to select Item 2:  
and confirm by pressing the ◻ button.

Use the ◀ or ▶ button to select the tem-  
perature units °C or °F.



Press the ◻ button to confirm the selection.

# Easystart Timer Workshop Menu



Menu Item	Service Function	Comments
1.1.1:	Heater 1 – display current fault	The heater must be switched on to detect current faults. “no diag” is displayed if no diagnostics cable is connected.
1.1.2:	Heater 2 – display current fault	The heater must be switched on to detect current faults. “no diag” is displayed if no diagnostics cable is connected.
1.2.1:	Heater 1 – read out fault memory F1 – F5	Display fault memory F1 – F5 with error code, e.g.: F1: 12. “no diag” is displayed if no diagnostics cable is connected.
1.2.2:	Heater 2 – read out fault memory F1 – F5	Display fault memory F1 – F5 with error code, e.g.: F1: 12. “no diag” is displayed if no diagnostics cable is connected.
1.3.1:	Heater 1 – delete fault memory F1 – F5	Select the delete → function by pressing the  button, the DEL display appears, flashing, press the  button to confirm. “no diag” is displayed if no diagnostics cable is connected.
1.3.2:	Heater 2 – delete fault memory F1 – F5	Select the delete → function by pressing the  button, the DEL display appears, flashing, press the  button to confirm. “no diag” is displayed if no diagnostics cable is connected.
1.4.1:	Heater 1 – read out operating hours counter	Operating time is displayed in minutes. “no diag” is displayed if no diagnostics cable is connected.
1.4.2:	Heater 2 – read out operating hours counter	Operating time is displayed in minutes. “no diag” is displayed if no diagnostics cable is connected.

# Easystart Timer Workshop Menu

Menu Item	Service Function	Comments
2:	Select temperature unit, °C or °F	Default: °C
3.1:	Set the undervoltage limit (EasyStart Timer only)	Default: 8 volt, Setting range: 8 – 28 volt in 0.1 volt increments.
3.2:	Set the undervoltage limit "offset" (EasyStart Timer only)	Default: 0 volt, Setting range: 0 – 6 volt in 0.1 volt increments.
3.3:	Set the "fault detection" debounce time (EasyStart Timer only)	Default: 20 seconds, Setting range: 5 – 255 seconds in 1 second increments.
4.1:	Heater 1 – set max. operating time (EasyStart Timer only)	Default: 120 min. Setting range: 10 – 120 min. in 1 min. increments, from the 120th min. – 720 min. in 5 min. increments. Continuous heating mode is also possible for air heaters. These settings have no effect on the operating time for timer programming.
4.2:	Heater 2 – set operating time (EasyStart Timer only)	Default: 120 min. Setting range: 10 – 120 min. in 1 min. increments, from the 120th min. – 720 min. in 5 min. increments. Continuous heating mode is also possible for air heaters. These settings have no effect on the operating time for timer programming.



# Easystart Timer Workshop Menu


Menu Item	Service Function	Comments
5:	Reset to as delivered condition	Press the  button to select the function, the default display appears, flashing, press the  button to confirm. All active timers are deleted.
6.1:	Read out control unit hardware version	Function is intended for internal purposes only.
6.2:	Read out control unit software version	Function is intended for internal purposes only.
8:	Select language, DE or EN	Default: EN
9:	Set upgrade box mode, On or Off	Default: Off A reset must be performed to activate the function (remove fuse).
10:	Select start time (On) or departure time (Off )	Default: Off (departure time) The departure time (Off) is absolutely necessary for heating mode with automatic operating time calculation (Item 11.1:). For heating mode without automatic operating time calculation (item 11.1:) it is possible to choose between start time (On) and departure time (Off ). A reset must be performed to activate the function (remove fuse).

# Easystart Timer Workshop Menu

Menu Item	Service Function	Comments
-----------	------------------	----------

11.1:	Set automatic operating time calculation, On or Off	<p>Default: Off</p> <p>A temperature sensor must be connected to the control unit or stationary unit. Additional settings are required, see Item 11.2: and 11.3:</p> <p>A reset must be performed to activate the function (remove fuse).</p> <p>Automatic operating time calculation is not possible for air heaters.</p>
11.2:	Set the engine size (cubic capacity)	<p>Default: 1800 cm<sup>3</sup></p> <p>Setting range: 1000 cm<sup>3</sup> – 4000 cm<sup>3</sup> in 100 cm<sup>3</sup> increments.</p> <p>The engine size can only be set if 11.1: is set to On.</p>
11.3:	Set the max. operating time	<p>Default: 60 min,</p> <p>Setting range: 10 min. – 60 min. in 1 min. increments.</p> <p>The max. operating time can only be set if 11.1: is set to On.</p>
12.1:	Set add-on unit AD, On or Off	<p>Default: Off</p> <p>Selection options:</p> <ol style="list-style-type: none"> <li>1. Via JE diagnosis → display flame and ventilate symbol (if supported by the heater) in the AD menu.</li> <li>2. Via switch-on signal S+2 (deactivated 1.2.2:, 1.3.2:, 1.4.2:, 9:) → S+2 (display only flame symbol and AD heat menu visible).</li> <li>3. Via the switch-on signal of the first heater S+1 (deactivated 1:) → S+1 (display heat menu only).</li> </ol> <p>A reset must be performed to activate the function (remove fuse).</p>
12.2.1:	Room temperature control, On or Off	Default: Off
12.2.2:	Hysteresis (On / Off difference): 0 – 7 °C	Default: 2 °C
12.2.3:	Sampling rate: 0 – 15 seconds	Default: 5 seconds

# Easystart Timer Workshop Menu

Menu Item	Service Function	Comments
13.1:	Select KL58 or KL15 mode	Default: KL58. Input KL58 = control background lighting of control unit. A reset must be performed to activate the function (remove fuse).
13.2:	If KL15 mode is active	Default setting: 15 min. Set afterrun time of heater until shutdown. Setting range: 1 – 255 min Value 0 = heater always remains in continuous operation.
14.6:	Show display contrast	This function can be used to change the contrast of the display.  <b>PLEASE NOTE!</b> It is also possible to reduce the contrast to such an extent that the screen display is no longer visible. With each PowerOnReset (remove fuse) the contrast is reset to the as-delivered condition.

## Note

Menu Items 14.1 to 14.5 are for testing

# Thank You



A WORLD OF COMFORT

